

# CHICKADEE Location Tracker



## User Guide

**Document Type:** User Guide

**Document Number:** T0008814

**Document Version:** 1.7

**Document Status:** Released

**Product Names and T-Codes:**

CHICKADEE

T0008534

**Release Date:** March 31, 2026

**PROPRIETARY:**

The information contained in this document is the property of TEKTELIC Communications Inc. Except as specifically authorized in writing by TEKTELIC, the holder of this document shall keep all information contained herein confidential, and shall protect the same in whole or in part from disclosure to all third parties.

© 2026 TEKTELIC Communications Inc., all rights reserved.

All products, names, and services are trademarks and registered trademarks of their respective companies.

## Contents

List of Tables .....	3
List of Figures .....	4
1 Product Description.....	5
1.1 Overview .....	5
1.2 Summary of HW Information, Streams, and Default Behavior .....	7
1.3 External Appearance and Interfacing.....	8
1.4 Specifications and Sensing Functions.....	9
1.4.1 Tracking with Geolocation .....	11
1.4.2 MCU Temperature Sensing .....	15
1.4.3 Accelerometer Transducer.....	16
1.4.4 BLE Beacon Mode .....	16
2 Setup of the Sensor .....	18
2.1 Included Product and Installation Material.....	18
2.2 Unpacking and Inspection .....	18
2.3 Commissioning .....	18
2.4 Activation .....	18
2.5 Battery Replacement.....	19
2.6 Battery Charging.....	19
2.7 Mounting.....	19
3 Operation and Functions.....	21
3.1 Configuration.....	21
3.2 Default Configuration.....	21
3.3 LED Behavior .....	21
3.3.1 EMERGENCY Mode .....	22
4 Troubleshooting .....	23
5 Compliance Statements .....	24
Appendix 1 - List of Geolocation Strategies.....	26
List of Acronyms.....	29
Revision History .....	30

## List of Tables

Table 1-1: CHICKADEE HW Models.....	7
Table 1-2: List of CHICKADEE Information Streams .....	8
Table 1-3: CHICKADEE Default Reporting Behavior .....	8
Table 1-4: CHICKADEE Specifications.....	9
Table 1-5: Supported Geolocation Scan Technologies .....	12
Table 1-6: Scan Order Logic Options.....	12
Table 1-7: Geolocation Strategies.....	13
Table 3-1: Default Reporting Periods.....	21
Table 3-2: Summary of LED Patterns .....	22

## List of Figures

Figure 1-1: CHICKADEE Location Tracking End-to-End Architecture .....	6
Figure 1-2: CHICKADEE Enclosure and External Interfacing .....	9
Figure 1-3: Periodic Geolocation Cycles and ULs .....	11
Figure 1-4: Default Geolocation Strategy Cycle Flow .....	14
Figure 1-5: The BLE Advertisement Scheme .....	17
Figure 2-1: Charging Contacts .....	19
Figure 2-2: Lanyard Clip Mounting Slot .....	20
Figure 2-3: Adhesive Tape Mounting Area .....	20
Figure 3-3: EB activation and deactivation block diagram .....	22

# 1 Product Description

## 1.1 Overview

This document provides a user manual for the *CHICKADEE Location Trackers* developed by TEKTELIC Communications Inc. This document includes instructions regarding the HW capabilities. For the functional operation and SW behaviour, please refer to the TRM document.

The CHICKADEE is a low-power LoRaWAN IoT sensor powered by a Li-Po rechargeable battery and built into a compact IP67 polycarbonate casing. Its primary purpose is for location tracking both indoors and outdoors using a combination of location-tracking technologies:

- **GNSS:** Outdoor tracking using satellite geolocation. There are two GNSS receivers built into Chickadee:
  - Low-power GNSS (LPGNSS).  
**Note: The acronym “LPGNSS” will refer to the LR1110 from this point on in this document.**
  - High precision GNSS using the ublox MAX-M10S receiver.  
**Note: The acronym “GNSS” will refer to the MAX-M10S from this point on in this document.**
- **Wi-Fi Sniffing:** Outdoor and/or indoor tracking using Wi-Fi access point geolocation.
- **BLE Tracking:** Indoor tracking using BLE beacon network localization.

The CHICKADEE is meant to be a component in an end-to-end location tracking solution as shown in Figure 1-1.<sup>1</sup>


**LoRaWAN** is the LoRa wireless communications standard protocol. This technology provides a low-bandwidth, low-power, and long-range<sup>2</sup> means of transmitting small amounts of data. It has been developed with wireless sensing in mind, and to enable new means of gathering telemetry in numerous environments. The CHICKADEE supports LoRa and (G)FSK modulations according to the LoRaWAN L2 1.0.4 Specification [1]. The 150 MHz-960 MHz ISM bands are utilized to meet

---

<sup>1</sup> **NOTE:** Only raw scan data is present in the LoRaWAN payloads, not sensor location information. In order to track and visualize a CHICKADEE’s location, an application server must be set up, integrated with the NS, and enabled to use the proper cloud location services. The information in this document is for the CHICKADEE sensor only; for information about setting up the rest of the end-to-end solution shown in Figure 1-1, refer to the TEKTELIC support portal [Knowledge Base](#).

<sup>2</sup> Up to 2 km NLoS and more than 22 km LoS.

different application requirements from the standards and proprietary protocols of the given region.

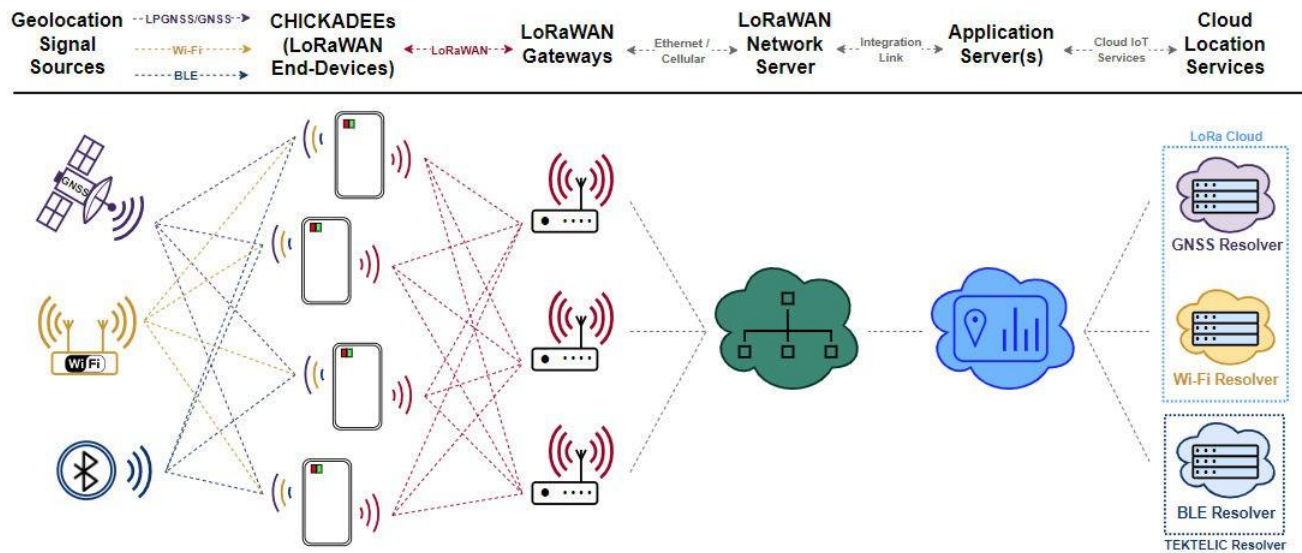

**Figure 1-1: CHICKADEE Location Tracking End-to-End Architecture**

The location information flows in this order:

1. CHICKADEE conducts LPGNSS, GNSS, Wi-Fi, and/or BLE scans to gather raw information from the available geolocation signal sources.
2. The raw scan results are conveyed via LoRa transmissions to 1 or more *LoRaWAN Gateways (GWs)*.
3. The GWs forward the packets to the *LoRaWAN Network Server (NS)* either by ethernet or cellular backhaul.
4. The raw scan results are forwarded to the application layer via *integration link*.
5. The application determines which *Cloud IoT Location Resolver Service(s)* to use depending on what type of scan data is forwarded. TEKTELIC's *LOCUS* application is designed to work natively with CHICKADEE, but any compatible 3<sup>rd</sup>-party application can be used.
6. The respective location resolver service processes the raw scan data to calculate a position fix.
  - a. LPGNSS scan data messages are designed to be processed.
  - b. BLE scan data messages are designed to be processed by TEKTELIC's *Geolocation Resolver Backend (GRB)* and is supported by TEKTELIC's *LOCUS* application.
  - c. Wi-Fi scan data messages can be processed with 3<sup>rd</sup> party applications.
7. The resolved fixes are returned to the application where they can then be visualized on a virtual dashboard.

In addition to geolocation, CHICKADEE is a multipurpose device equipped with a variety of technology:

- **Core design:** Based on the low-power, IoT-targeted STM32WB55CGU6 MCU, which runs the system SW and has a built-in BLE module. The MAX-M10S transceiver from u-blox handles the GNSS operations.
- **Accelerometer:** Detects device motion state so geolocation updates can be sent more frequently while in motion. Motion alarms and the raw acceleration vector can also be reported if knowledge of sensor orientation is enabled.
- **BLE tracker mode:** In this mode, the sensor is in BLE receive only to conduct geolocation tracking.
- **BLE beacon mode:** In this mode, the sensor broadcasts BLE advertisements which make it discoverable by other nearby trackers or BLE-capable devices.
- **MCU temperature sensing:** The temperature of the MCU can be reported, and additional reports can be sent if the conditions cross configurable thresholds.
- **Battery data:** The remaining capacity and lifetime can be reported. The battery lifetime has been estimated to be 6 months with default configuration.

## 1.2 Summary of HW Information, Streams, and Default Behavior

Table 1-1 presents the currently available sensor HW variants. The information streams supported by the SW are shown in Table 1-2 and the default configuration for reporting data has been shown in Table 1-3.

**Table 1-1: CHICKADEE HW Models**

Description	Product Model	Order Code	Region	Product PCBA Code
CHICKADEE	T0008534	CHSENNEU868	EU868	T0008492
CHICKADEE	T0008534	CHSENNNA915	NA915	T0008492
CHICKADEE	T0008534	CHSENNAU915	AU915	T0008492
CHICKADEE	T0008534	CHSENNAS923	AS923	T0008492

Table 1-2: List of CHICKADEE Information Streams

Stream Direction	Data Type	Sent on LoRaWAN Port [decimal]
<b>UL (Sensor to NS)</b>	Reports containing sensor data: <ul style="list-style-type: none"> <li>• <b>GNSS</b> location fix (“0x00 00 00”) means “no fix found” after GNSS scan</li> <li>• Battery life data</li> <li>• Accelerometer vectors and alarms</li> <li>• MCU temperature</li> <li>• Geolocation cycle failed message</li> </ul>	<b>10</b>
	Responses to read/write configuration and control commands	<b>100/101</b>
	<b>LPGNSS</b> scan results to be forwarded	<b>192</b>
	Reports containing discovered BLE device data	<b>25</b>
	Wi-Fi scan results to be forwarded	<b>197</b>
<b>DL (NS to Sensor)</b>	Putting sensor into DEEP SLEEP	<b>99</b>
	Configuration and control commands	<b>100</b>

Table 1-3: CHICKADEE Default Reporting Behavior

Report	Report Type	Default Periodicity
Battery data	Periodic	24 hours
	Event-based	When function button is pressed
Geolocation Update	Periodic	10 min when in motion (LPGNSS/GNSS) 1 hour when still (LPGNSS/GNSS)
Acceleration vector	Periodic	Disabled
Accelerometer motion alarm	Event-based	When motion is detected When sensor becomes still
MCU temperature	Periodic	1 hour
	Threshold-based	Disabled

### 1.3 External Appearance and Interfacing

CHICKADEE enclosure is shown in Figure 1-2 and the locations of the external user interface hardware are identified. There are two buttons, the Function Button (FB) and the EMERGENCY button (EB). The Function button has three purposes and will act accordingly depending on how the button is pressed. These purposes are:

- a. **Activating the device:** When shipped from the factory, a CHICKADEE unit is in DEEP SLEEP mode to conserve the battery capacity. To wake it up and have it join the network, press the Function Button once quickly, then press and hold the button for 3 s. After this button



pattern the unit will turn on and try to join the network server.

- b. **Forcing an uplink**<sup>3</sup>: Press the function button and hold for 1 s to send an uplink which contains the battery status. The **RED** LED will flash indicating that the uplink was sent.
- c. **Resetting**: Press the function button once quickly, then press and hold the button for 3 s.

The EMERGENCY button is for placing the sensor in EMERGENCY mode from normal mode, and for cancelling EMERGENCY mode. More details are in Section 3.3.1.

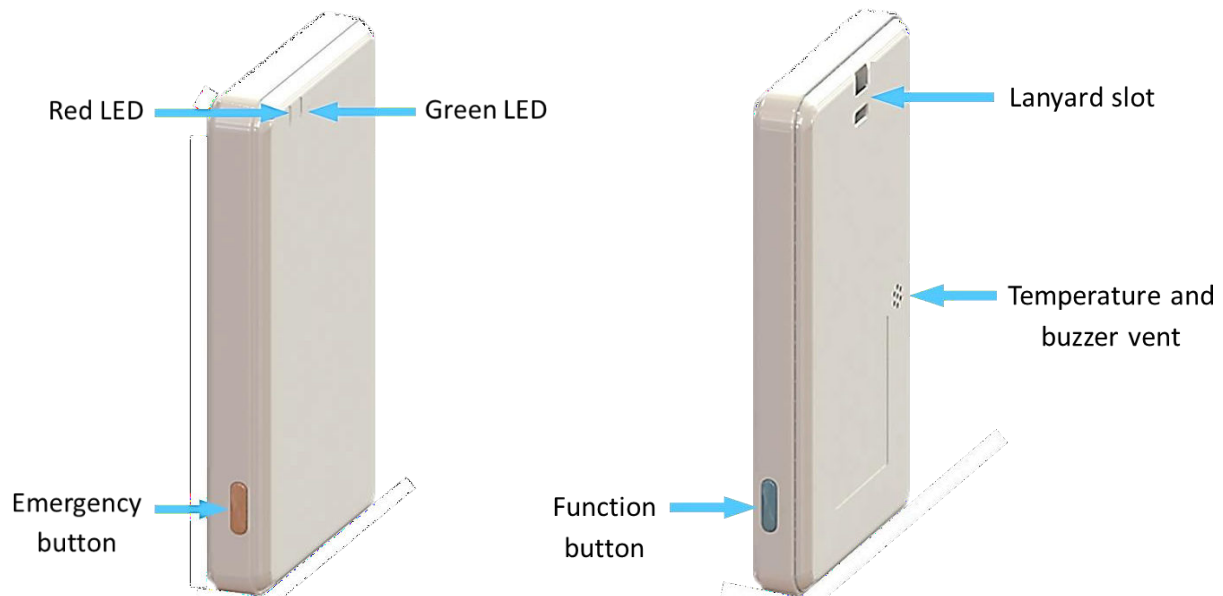


Figure 1-2: CHICKADEE Enclosure and External Interfacing

## 1.4 Specifications and Sensing Functions

The CHICKADEE specifications are listed in Table 1-4. The main sensing functions are described in the following subsections.

---

<sup>3</sup> As a Class-A LoRaWAN end-device, the sensor only opens LoRaWAN receive windows immediately following uplink transmissions. It is therefore useful to be able to force the sensor to UL so that it can receive DL configuration commands from the NS ahead of its next scheduled periodic report.


Table 1-4: CHICKADEE Specifications

Parameter	Specification
Use Environment	Indoor/outdoor commercial/residential
Environmental Rating	IP67
Enclosure and Mounting	Custom design by TEKTELIC, slot for lanyard loop
Operating Temperature	-10°C to 55°C
Charging Temperature	0 to 45°C
Storage Temperature for Optimal Battery Life (<3 months)	-10°C to 60°C
Storage Temperature for Optimal Battery Life (>3 months)	15°C to 30°C
Operating Relative Humidity	5% to 95% (non-condensing)
Storage Relative Humidity	10% to 100% (non-condensing)
Size	95 X 56 X 11 mm
Weight	84g
Battery	Internal non-replaceable rechargeable Lithium-Ion polymer
Power input	USB-C (5 V, 300 mA) or charging contacts (6 to 15 V d.c., 0.3 A maximum)
Network technology/Frequency band	LoRaWAN US915, EU868
Air Interfaces	LoRa, BLE, Wi-Fi, GNSS
Maximum Tx Power	<ul style="list-style-type: none"> <li>14 dBm (LoRa)</li> <li>0 dBm (BLE)</li> </ul>
Sensing Elements	LPGNSS receiver (LR1110), GNSS receiver (MAX10), Wi-Fi receiver, BLE transceiver, accelerometer, MCU Temperature, battery gauge
GNSS Constellations	<ul style="list-style-type: none"> <li>GPS L1 + GPS geostationary SBAS: EGNOS and WAAS</li> <li>BeiDou B1 + BeiDou geostationary GEO/IGSO</li> </ul>
Wi-Fi Compatibility	802.11b/g/n
Bluetooth Compatibility	BLE based on Bluetooth 5.3
RFID Support	Supports passive RFID tag integration (typical sticker size: 25 mm diameter, 0.8 mm thickness)
LoRa RF Sensitivity	Up to -137 dBm (SF12, 125kHz BW)
BLE Sensitivity (PER <30.8%)	125 kbps: -103 dBm 500 kbps: -98 dBm 2 Mbps: -91 dBm
Accelerometer Sensitivity	Sample rate: 1 Hz, 10 Hz, 25 Hz, 50 Hz, 100 Hz, 200 Hz, 400 Hz Measurement range: ±2 g, ±4 g, ±8 g, ±16 g Accuracy: 16 mg, 32 mg, 64 mg, 192 mg
LEDs	<b>Green:</b> Joining the network activity <b>Red:</b> LoRa Tx or Rx activity  Solid <b>Red:</b> Battery charging Solid <b>Green:</b> Battery charging complete
Battery Lifetime	6 months

### 1.4.1 Tracking with Geolocation

The primary purpose of the CHICKADEE is location tracking both indoors and outdoors using a combination of location-tracking technologies: **GNSS**, **LPGNSS**, **Wi-Fi sniffing**, and **BLE scanning**.

One or more geolocation scans are conducted during a *geolocation cycle*. A new geolocation cycle occurs at a regular period called the *geolocation update period*, as shown in Figure 1-3. By default, the geolocation update period is shorter when the sensor is in motion and longer when the sensor is still.

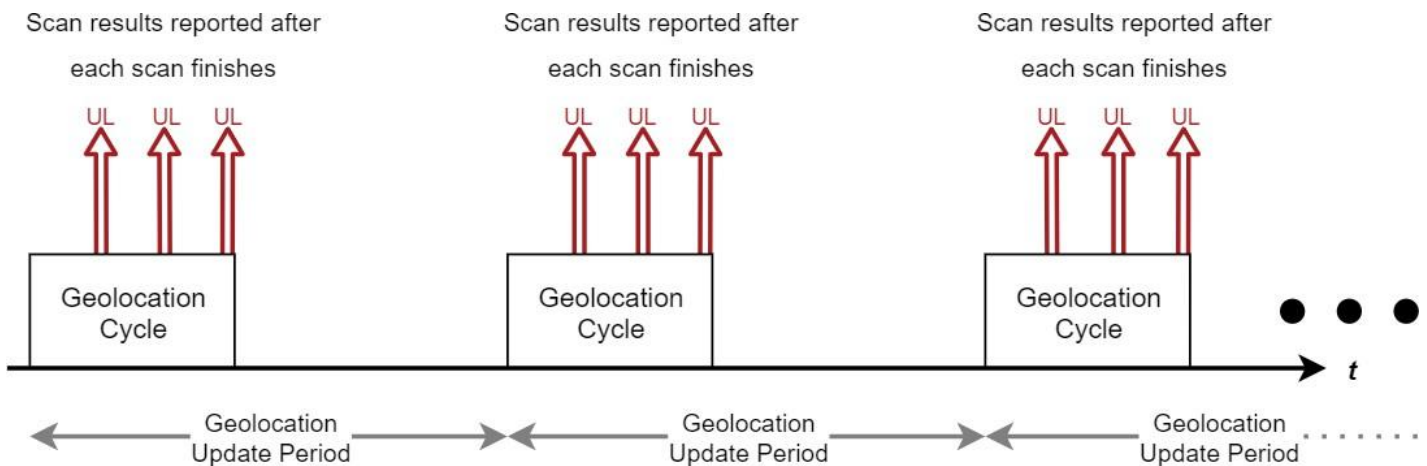

**Figure 1-3: Periodic Geolocation Cycles and ULs**

The satellite receiver can be configured to the user's preference; either LPGNSS or GNSS. LPGNSS is chosen by default for NORMAL operation mode. Should LPGNSS fail to get a positioning fix, the user can set whether or not to use GNSS as a backup.

During a geolocation cycle, up to 3 scans can be defined and occur in sequence. After each scan concludes, if successful, the raw results are reported in a LoRaWAN UL before the next scan begins<sup>4</sup>.

The duration of each geolocation cycle may vary from 10's of seconds to a few minutes, depending on several factors (e.g.: satellite signal strength, user configurable BLE scan duration, regional duty cycle limitations, etc.). It is important to configure the geolocation update period to be greater than the expected geolocation cycle duration, otherwise scans may not complete, and data may be lost. If LPGNSS scanning is enabled, it is not recommended to set the geolocation

<sup>4</sup> If sending BLE scan results is paused due to regional duty cycle restrictions, the next scan (GNSS or Wi-Fi), if defined, will not begin until the duty cycle timeout expires and the BLE results are sent.

update period to less than 3.5 min. If BLE scanning is enabled, it is not recommended to set the geolocation update to less than 20 s.

The supported scan type options and behaviors are summarized in Table 1-5.

**Table 1-5: Supported Geolocation Scan Technologies**

Technology	Function	Results Format	Scan Failure Behavior	Configurable Options
LPGNSS	LR1110 performs a low-power GNSS scan, then sends the scan results via LoRaWAN UL to compute the position.	NAV message or message fragments containing satellite information.	Fail criteria <sup>5</sup> : too few satellites are detected, almanac is out of date, or clock is out of sync. No UL is sent unless all other scans in the cycle also fail.	Assist coordinates
GNSS	MAX-M10S performs a GNSS scan, then sends the scan results via LoRaWAN UL	Message fragments containing satellite information.	Send a blank UL on port 10.	Switch primary geolocation scan technology (LPGNSS or GNSS)
Wi-Fi	LR1110 performs a Wi-Fi scan then sends the scan results via LoRaWAN UL to compute the position.	Discovered Wi-Fi access point MAC addresses and RSSIs [dBm].	Fail criterion <sup>5</sup> : less than 3 Wi-Fi access points are discovered. No UL is sent unless all other scans in the cycle also fail.	None
BLE	MCU performs a BLE scan then sends the scan results via LoRaWAN UL for the GRB (Geolocation Resolver Backend) to compute the position.	Discovered BLE device MAC addresses and RSSIs [dBm].	Fail criterion: 0 BLE beacons detected. UL containing an empty list is sent.	<ul style="list-style-type: none"> <li>• Scan duration</li> <li>• Scan duty cycle</li> <li>• Up to 4 discovered BLE device filters</li> </ul>

The *scan order logic* within the geolocation cycle is also configurable to allow the cycle to end upon a successful scan before the other defined scans occur. Doing so can save battery life in use-cases where the scan types can be prioritized by how likely they are to succeed, e.g.: if it is known that GNSS will be the available geolocation signal source 90% of the time. The supported scan order logic options are shown in Table 1-6.

---

<sup>5</sup> The results of successful GNSS and Wi-Fi scan will fail to send if the sensor is restricted due to duty cycle at the time. Unlike other data reports, the scan results are dropped completely and not transmitted once the duty cycle timeout elapses. In these cases, if all other scans also fail, the *geolocation cycle failed* message will indicate this happened.

**Table 1-6: Scan Order Logic Options**

<b>A:</b>	1 <sup>st</sup> scan	→	2 <sup>nd</sup> scan if 1 <sup>st</sup> scan fails	→	3 <sup>rd</sup> scan if 2 <sup>nd</sup> scan fails
<b>B:</b>	1 <sup>st</sup> scan	→	2 <sup>nd</sup> scan	→	3 <sup>rd</sup> scan if 2 <sup>nd</sup> scan fails
<b>C:</b>	1 <sup>st</sup> scan	→	2 <sup>nd</sup> scan if 1 <sup>st</sup> scan fails	→	3 <sup>rd</sup> scan
<b>D:</b>	1 <sup>st</sup> scan	→	2 <sup>nd</sup> scan	→	3 <sup>rd</sup> scan

#### 1.4.1.1 Geolocation Strategies

The ability to define up to 3 scan types and choose 1 of 4 scan order logic options results in 12 possible configurational combinations. This combination is called the *geolocation strategy*. Of the 12 geolocation strategies, only 7 result in unique device behavior, as shown by the green shaded boxes in Table 1-7.

**Table 1-7: Geolocation Strategies**

Strategy Description	Scan Order Logic	Number of Defined Scans		
		3	2	1
<b>FALLBACK</b> <ul style="list-style-type: none"> <li>• 1<sup>st</sup> priority scan always done.</li> <li>• Fallback to other scan(s) upon failure.</li> <li>• End cycle upon successful scan.</li> </ul>	A	#1	#2	#7
<b>1 BACKUP</b> <ul style="list-style-type: none"> <li>• 1<sup>st</sup> and 2<sup>nd</sup> priority scans always done.</li> <li>• 3<sup>rd</sup> scan if both 1<sup>st</sup> and 2<sup>nd</sup> scans failed.</li> </ul>	B	#3	#6	#7
<b>2 BACKUPS</b> <ul style="list-style-type: none"> <li>• 1<sup>st</sup> priority scan always done.</li> <li>• 2<sup>nd</sup> and 3<sup>rd</sup> scans done if 1<sup>st</sup> scan failed.</li> </ul>	C	#4	#2	#7
<b>ALL SCANS</b> <ul style="list-style-type: none"> <li>• All defined scans always done.</li> </ul>	D	#5	#6	#7

The geolocation strategy used should be tailored to the use case of the CHICKADEE deployment. Some example use-cases and strategies are:

- **Outdoor remote worker: FALLBACK with (1) LPGNSS or GNSS (2) Wi-Fi, (3) BLE**  
Likely to be outside for most of the time, so LPGNSS or GNSS is likely to succeed most of the time. Wi-Fi is next most likely, then BLE.
- **Indoor worker: 2 BACKUP with (1) BLE, (2) Wi-Fi, (3) LPGNSS or GNSS**

Likely to be in an indoor BLE Beacon network most of the time, so BLE is likely to succeed most of the time. If BLE fails, try both other methods to get a position estimate.

The default geolocation strategy is fallback (scan order logic A) with all 3 scans defined in priority order GNSS, Wi-Fi, BLE. The operational flow of this strategy is depicted in Figure 1-4. All other strategy flow depictions are shown in Appendix 1 - List of Geolocation Strategies.

## Geolocation Strategy 1 (Default) Fallback, All Scans Defined

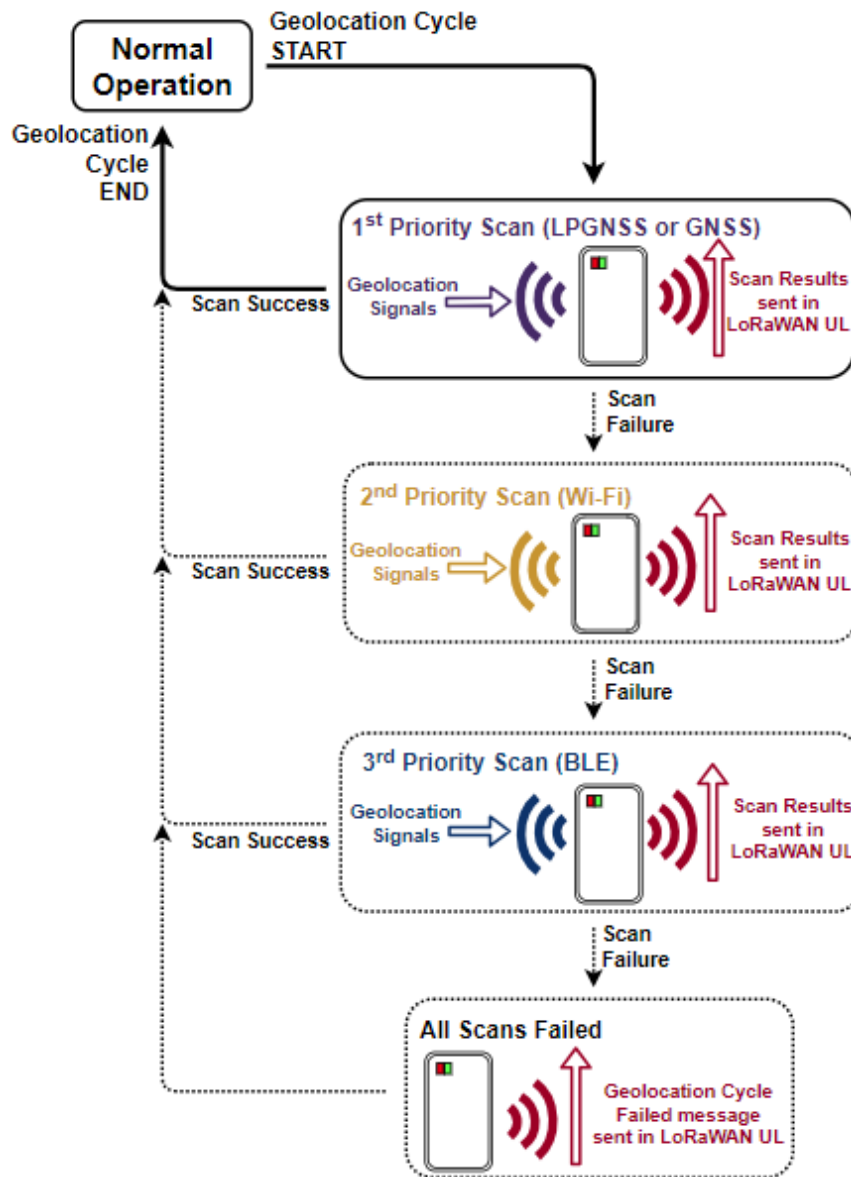


Figure 1-4: Default Geolocation Strategy Cycle Flow

With all geolocation strategies, if all scans fail, the *geolocation cycle failed* message is sent.

#### 1.4.1.2 LPGNSS and Wi-Fi Operation

The LPGNSS and Wi-Fi scan results are formatted in such a way that the edge based to resolve the sensor's position. Both UL and DL communications are exchanged between the CHICKADEE and server to transfer all the information needed for the positions to be resolvable.

For LPGNSS scan results to be valid and resolvable, the following are needed:

- **Valid clock synchronization:** The internal time of the sensor must be synchronized periodically. T
- **Valid almanac:** The almanac in the sensor must be kept up to date.
- **Assist coordinates:** These help the resolver with an initial estimate of the sensor's location. These can be configured specifically by the user if desired, but the SW will communicate to obtain assist coordinates upon startup if none are defined.

**Wi-Fi scanning has no configurable options.**

#### 1.4.1.3 BLE Operation with LOCUS and the GRB

The BLE scan results are formatted in such a way that the TEKTELIC LOCUS application can resolve and display the sensor's position. Indoor BLE beacon networks can be built virtually in LOCUS to match the physical setup. When LOCUS receives a sensor UL with raw BLE scan data, it forwards it to the *Geolocation Resolver Backend* (GRB) cloud service, which computes and returns the position estimate within the beacon network.

For information about setting up LOCUS, refer to the TEKTELIC support portal [Knowledge Base](#). For a description of BLE scan behavior, see the TRM.

### 1.4.2 MCU Temperature Sensing

CHICKADEE can send data for MCU temperature [°C], read from the MCU, in a LoRaWAN UL. Sampling cannot be disabled, but reporting can be disabled. By default, temperature is reported once every hour.

Threshold ranges can also be set such that moving in or out of range causes additional MCU temperature data reports.

### 1.4.3 Accelerometer Transducer

The CHICKADEE supports motion sensing through an integrated 3-axis accelerometer which can optionally be disabled. The main role of the accelerometer in the is to detect motion that can indicate a change of the sensor's status from stillness to mobility, or vice versa.

The accelerometer generates an acceleration alarm when a motion event is detected that can be reported OTA. An acceleration event report is based on exceeding a defined acceleration alarm threshold count in a defined alarm threshold period. These thresholds can be customized such that there will not be multiple reports for a single event, depending on the definition of an event in a particular use case. An alarm event can only be registered after a configurable grace period elapses since the last registered alarm event. Carefully setting the grace period is important and prevents from repeatedly registering an accelerometer event.

In addition to alarms, detected motion can trigger the transitions between geolocation update periods. That is, when the **Accelerometer Assist** function is enabled:

- When new motion is detected:
  - A new geolocation cycle begins immediately.
  - New geolocation cycles occur periodically according to the MOBILE geolocation update period.
- When the motion has ended:
  - A new geolocation cycle begins immediately.
  - New geolocation cycles occur periodically according to the STILL geolocation update period.

The geolocation update periods are both configurable.

For location tracking, Accelerometer Assisted geolocation scans help to get location updates at appropriate rates: faster when moving and slower when still. Accelerometer Assist also helps to update the location at 2 critical times; when objects leave old locations and settle in new ones. Accelerometer Assist is enabled by default.

The accelerometer can also be polled periodically for its output acceleration vector for applications in which the sensor's orientation is of interest.

### 1.4.4 BLE Beacon Mode

The CHICKADEE supports a *beacon mode* function as an alternative to geolocation tracker mode. The default mode of the sensor is tracker mode, so it must be switched into beacon mode.




When in beacon mode, no geolocation scans occur and the BLE operates in Tx only. It sends out periodic *advertisements* which are small packets of data. These packets are discoverable by other CHICKADEEs operating in tracker mode, as well as any other device capable of BLE scanning.

When in beacon mode, the sensor is still LoRaWAN-backhauled. That is, it can still send sensor data in LoRaWAN ULs and be reconfigured through LoRaWAN DLs. Furthermore, all other transducer functions are accessible in either beacon or tracker mode.

After a beacon joins the LoRaWAN network, it begins broadcasting BLE advertisements. This continues throughout normal operation as a background process.

The *advertising interval* is the time between the beginnings of consecutive advertisement transmissions as shown in Figure 1-5. It is user-configurable in units of [ms].

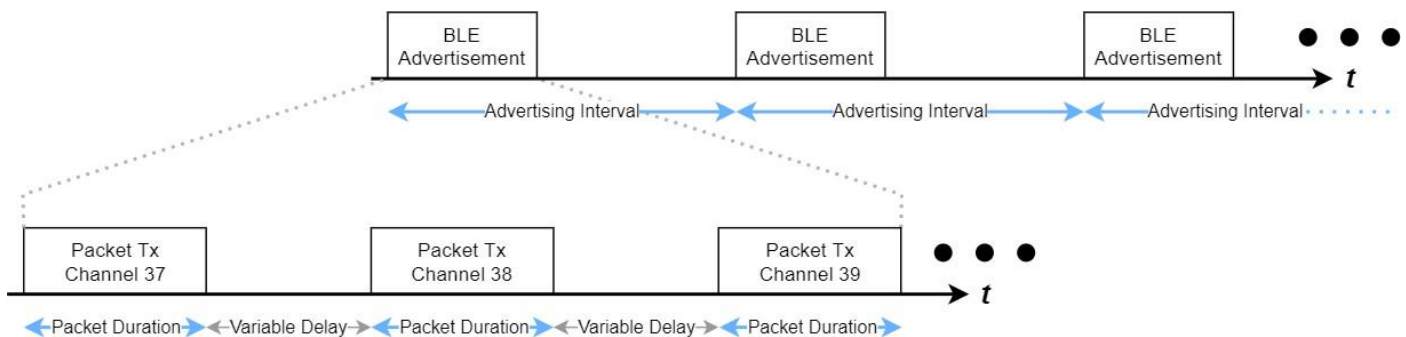

**Figure 1-5: The BLE Advertisement Scheme**

Figure 1-5 also shows that each single BLE advertisement comprises 3 individual packet transmissions, sent one after another on BLE channels 37, 38, and 39<sup>6</sup>. This is to maximize the chances of a BLE device scanning on a single channel receiving 1 packet per advertising interval.

In addition to the advertising interval, the advertisement *Tx power* level is also a configurable operational parameter.

The BLE advertisement and LoRa radio transmission are mutually exclusive and never overlap. If any reporting becomes due, the BLE advertisements are paused while the LoRa activity is occurring.

The BLE advertising packet formatting supports 3 major BLE standards: iBeacon, Eddystone UID, and Eddystone TLM. By default, only iBeacon is enabled.

<sup>6</sup> <https://www.bluetooth.com/specifications/specs/core-specification-5>

## 2 Setup of the Sensor

### 2.1 Included Product and Installation Material

The following items are shipped with each sensor:

- 1x sensor with 3.7 V Li-Ion battery installed. The battery is not replaceable by the user.
- 1x lanyard clip
- 1x Quick Start Guide

### 2.2 Unpacking and Inspection

The following should be considered during the unpacking of a new sensor.

Inspect the shipping carton and report any significant damage to TEKTELIC.

Unpacking should be conducted in a clean and dry location.

Do not discard the shipping box or inserts as they will be required if a unit is returned for repair or reprogramming.

### 2.3 Commissioning

Each sensor has a set of commissioning information that must be entered into the network server for the sensor to be able to join the network and begin normal operation once activated. For instructions on how to do this please refer to the Network Server Quick Start Guide (available online in the [Knowledge Base](#)). The commissioning info is included on the package labels.

You can find the commissioning keys inside the device box. If you don't have the box, raise a ticket in our support portal and provide the T-Code, Revision and Serial Number on the label placed on the device.

### 2.4 Activation

The sensor is shipped in a secured enclosure with the battery preinstalled in a state of DEEP SLEEP. After unpackaging a CHICKADEE, the user must charge the battery when CHICKADEE is removed from the shipping box. This is done through the USB-C connector at the base of the unit by using a USB-C cable, or by the charge contacts, if so equipped (requires a custom adapter provided by TEKTELIC). The **RED** LED will be solid while the battery is charging and will turn to solid **GREEN** when charging is complete. Charging will take approximately 5 hours to complete.

Pressing the Function Button will activate CHICKADEE (see Section 1.3), and it will try to join the network server. When the CHICKADEE is activated, it will display an LED indication (described in §3.3) to show that it is beginning to join the network. It may take up to 10 seconds between the time of activation and the beginning of the LED join attempt pattern.

Once activated, the sensor will automatically begin the join process. CHICKADEE cannot be turned off by the user.

## 2.5 Battery Replacement

The battery is non-replaceable, return the unit to TEKTELIC for service.

## 2.6 Battery Charging

**CAUTION: Do not attempt to open the sensor, there are no serviceable components.**

**CAUTION: Do not incinerate, disassemble, short terminals, or expose to high temperature – risk of fire or explosion or the leakage of flammable liquid or gas.**

The CHICKADEE can be charged from a standard USB-C connector or through the external charging contacts on the bottom end of the module. Simultaneous application of power to both inputs is not allowed. Charging through the charging contacts requires the use of a custom charger cradle supplied by TEKTELIC.

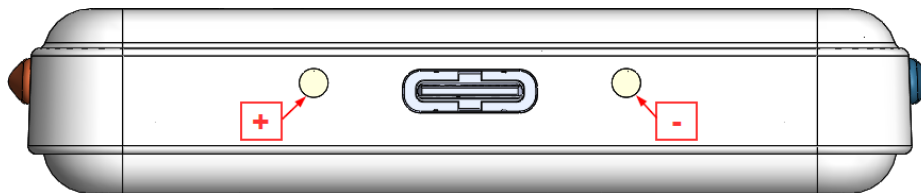


Figure 2-1: Charging Contacts

## 2.7 Mounting

The CHICKADEE is primarily intended to be body worn using the provided lanyard clip.



**Figure 2-2: Lanyard Clip Mounting Slot**

The CHICKADEE may also be mounted to a material object using adhesive tape provided the module is mounted no more than 2 m above floor level.



**Figure 2-3: Adhesive Tape Mounting Area**

## 3 Operation and Functions

### 3.1 Configuration

The CHICKADEE supports a full range of OTA configuration options. Specific technical details are available in the corresponding TRM documents. All configuration commands need to be sent OTA during the sensor's DL Rx windows.

### 3.2 Default Configuration

Table 3-1 lists the default reporting behavior of the CHICKADEE. Reporting behavior can be changed from default through OTA DL commands.

**Table 3-1: Default Reporting Periods**

Report	Report Type	Default Periodicity
Battery data	Periodic	24 hours
	Event-based	When function button is pressed
Geolocation Update	Periodic	10 min when in motion (LPGNSS/GNSS) 1 hour when still (LPGNSS/GNSS)
Acceleration vector	Periodic	Disabled
Accelerometer motion alarm	Event-based	When motion is detected When sensor becomes still
MCU temperature	Periodic	1 hour
	Threshold-based	Disabled

### 3.3 LED Behavior

The LED behavior is not user configurable.

The LEDs are normally off. Their blinking patterns reflect different actions and states of the sensor. At a high-level, the main patterns are summarized in Table 3-2. The detailed sequence and timings for each are described in the following subsections.

Table 3-2: Summary of LED Patterns

LED Pattern	Meaning
<b>GREEN</b> blinking rapidly and a single <b>RED</b> flash every time a JOIN REQUEST is sent (~40 s)	JOIN mode; attempting to join the network
Single <b>RED</b> flash	UL sent
Single <b>GREEN</b> flash	DL received
Pattern for EMERGENCY	Entering and exiting EMERGENCY state, by pressing and holding the <b>Emergency Button</b> for 2 s
Solid <b>RED</b> <sup>7</sup>	Battery charging
Solid <b>GREEN</b>	Battery charging complete. <b>GREEN</b> LED will stay on until USB-C charging cable is disconnected.

### 3.3.1 EMERGENCY Mode

CHICKADEE is equipped with an Emergency Button (EB), which is used for the following purposes:

1. EB Active event: Pressing and holding the EB for at least 2 s sounds the buzzer<sup>8</sup> with the emergency active buzz pattern, flashes the LEDs, sends location information, and makes a system state transition to the EMERGENCY state (if already not in that state). The buzzer will repeat the pattern every 10 s while in the EMERGENCY state.
2. EB Inactive event: Pressing and holding the EB for at least 2 s while in the EMERGENCY state turns the buzzer off, stops the periodic LED flashes, sends location information, and makes a system state transition to the NORMAL state.

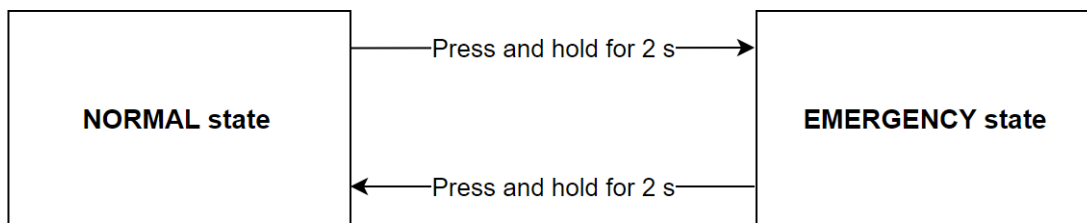


Figure 3-1: EB activation and deactivation block diagram

**Geolocation cycles and scan order logic, as explained in §1.4.1.1, are configurable while CHICKADEE is in EMERGENCY STATE.**

<sup>7</sup> While the battery is charging, the **RED** and **GREEN** LED activity for LoRa UL and DL are suspended.

<sup>8</sup> The buzz pattern for entering and exiting EMERGENCY state is non-configurable.

## 4 Troubleshooting

For troubleshooting information, please refer to Appendix 4 of the [CHICKADEE TRM](#).

## 5 Compliance Statements

### **Federal Communications Commission:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

To comply with FCC exposure limits for general population / uncontrolled exposure, this device should be installed at a distance of 20 cm from all persons and must not be co-located or operating in conjunction with any other transmitter.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in an industrial installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **Innovation, Science and Economic Development Canada (Industry Canada):**

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- i. This device may not cause interference, and
- ii. This device must accept any interference, including interference that may cause undesired operation of the device.



This device should be installed and operated with minimum distance 0.2 m from human body.

*L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:*

- (1) L'appareil ne doit pas produire de brouillage.*
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.*

*Cet appareil doit être installé et utilisé à une distance minimale de 0.2 m du corps humain.*


**California Proposition 65:**

**WARNING:** This product can expose you to chemicals including lead, nickel, and carbon black, which are known to the State of California to cause cancer, birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov) [10].


## Appendix 1 - List of Geolocation Strategies

Solid lines: process always done. Dotted lines: process done under certain conditions.


### Geolocation Strategy 1 (Default) Fallback, All Scans Defined

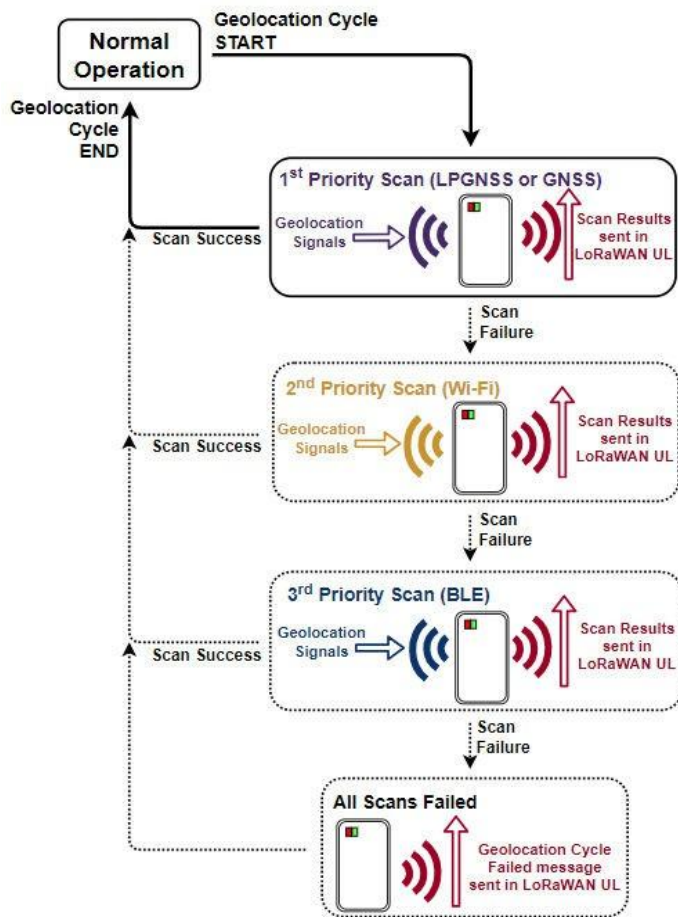


### Geolocation Strategy 2 Fallback, 2 Scans Defined

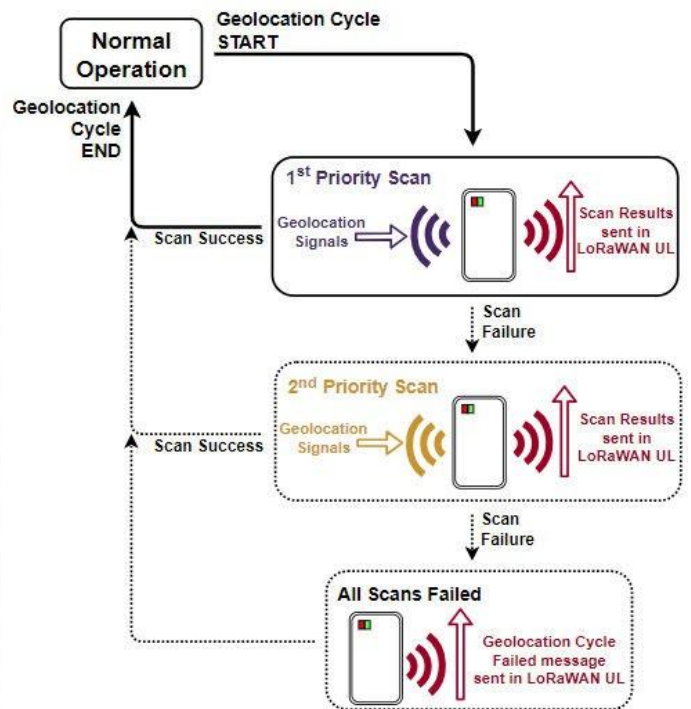


### Geolocation Strategy 3 1 Backup, All Scans Defined

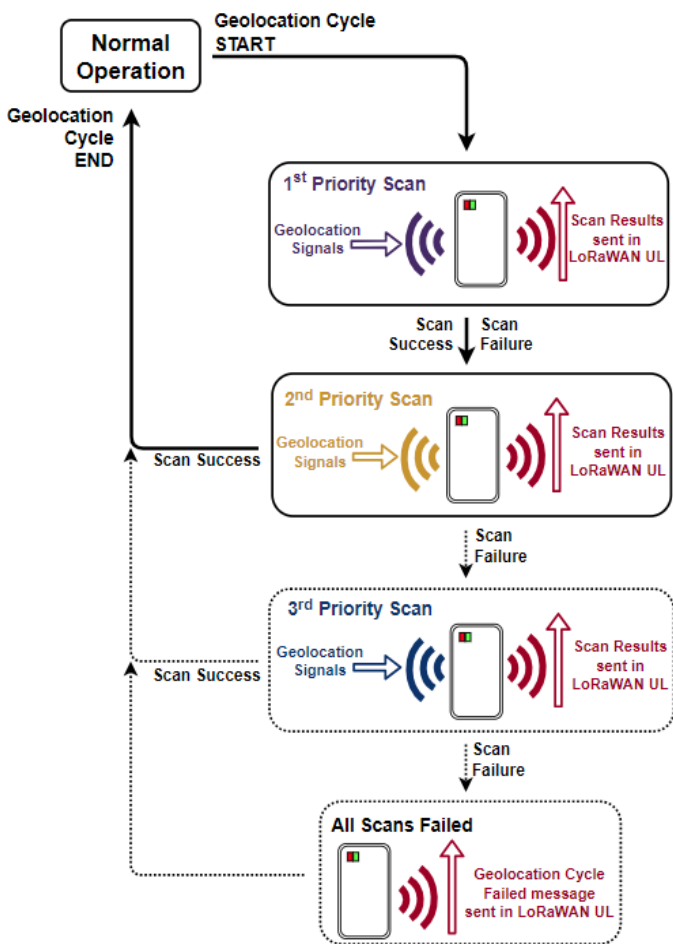


### Geolocation Strategy 4 2 Backups, All Scans Defined

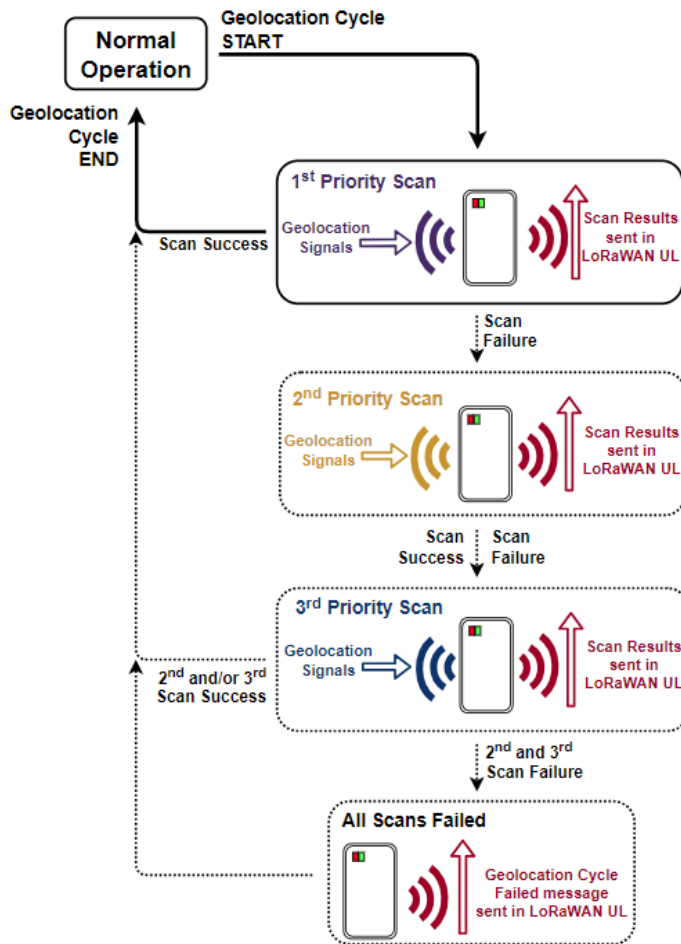


**Geolocation Strategy 5**  
All Scans, All Scans Defined

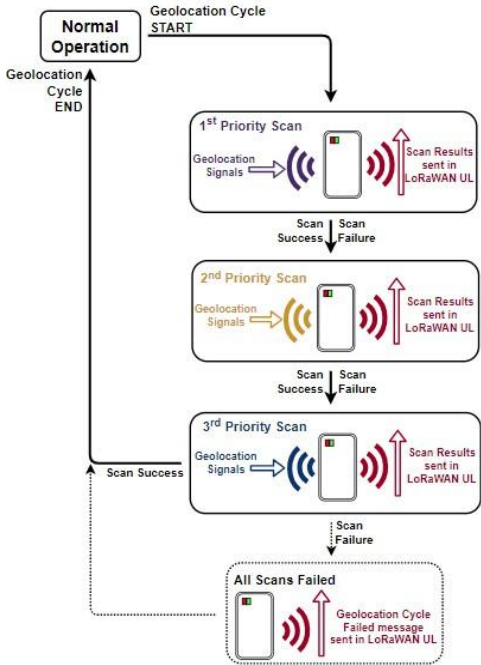

**Geolocation Strategy 6**  
All Scans, 2 Scans Defined

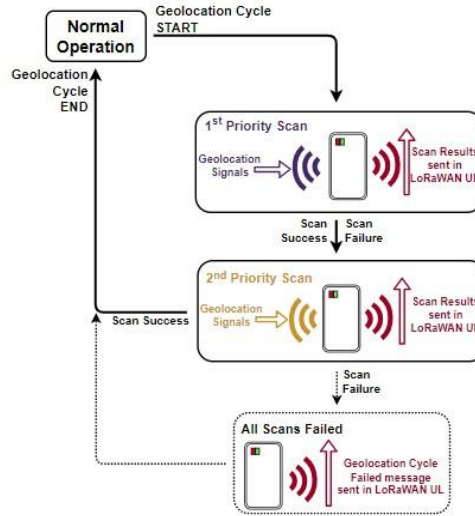

**Geolocation Strategy 7**  
All Scans, 1 Scan Defined

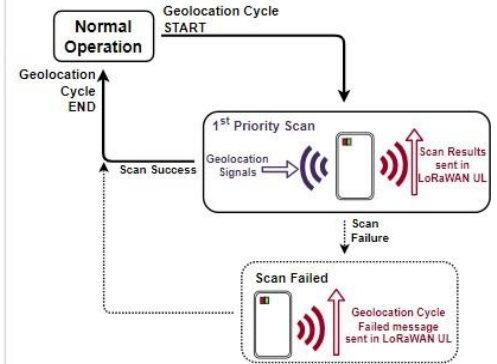

## List of Acronyms

<b>BER</b> .....	Bit Error Rate	<b>LTC</b> .....	Lithium-Thionyl Chloride
<b>BLE</b> .....	Bluetooth Low-Energy	<b>MAC</b> .....	Media Access Control
<b>CNR</b> .....	Cahiers des charges sur les Normes Radioélectriques (RSS)	<b>MCU</b> .....	MicroController Unit
<b>DL</b> .....	DownLink	<b>NA</b> .....	North America
<b>EGNOS</b> .....	Wuropean Geostationary Navigation Overlay Service	<b>NLOS</b> .....	Near LoS
<b>EOS</b> .....	End Of Service	<b>NS</b> .....	Network Server
<b>EU</b> .....	European Union	<b>OTA</b> .....	Over The Air
<b>FCC</b> .....	Federal Communications Commission	<b>PCB</b> .....	Printed Circuit Board
<b>FSK</b> .....	Frequency Shift Keying	<b>PCBA</b> .....	PCB Assembly
<b>FW</b> .....	FirmWare	<b>Rev</b> .....	Revision
<b>GEO</b> .....	GEOstationary Orbit	<b>RF</b> .....	Radio Frequency
<b>GFSK</b> .....	Gaussian FSK	<b>RH</b> .....	Relative Humidity
<b>GNSS</b> .....	Global Navigation Satellite System	<b>RSS</b> .....	Radio Standards Specifications (CNR)
<b>GPS</b> .....	Global Positioning System	<b>RSSI</b> .....	Received Signal Strength Indicator
<b>GRB</b> .....	Geolocation Resolver Backend	<b>Rx</b> .....	Receive, receiver, etc.
<b>GW</b> .....	GateWay	<b>SBAS</b> .....	Satellite Based Augmentation System
<b>HW</b> .....	HardWare	<b>SW</b> .....	SoftWare
<b>ID</b> .....	IDentifier	<b>TLM</b> .....	TeLeMetry
<b>IGSO</b> .....	Inclined GeoSynchronous Orbit	<b>TRM</b> .....	Technical Reference Manual
<b>IoT</b> .....	Internet of Things	<b>Tx</b> .....	Transmit, Transmitter, etc.
<b>IP</b> .....	Ingress Protection	<b>UG</b> .....	User Guide
<b>ISM</b> .....	Industrial, Scientific, and Medical	<b>UID</b> .....	Unique ID
<b>LED</b> .....	Light-Emitting Diode	<b>UL</b> .....	UpLink
<b>LoRa</b> .....	Long-Range	<b>US</b> .....	United States
<b>LoRaWAN</b> .....	LoRa Wide-Area Network	<b>v</b> .....	version
<b>LoS</b> .....	Line-of-Sight	<b>WAAS</b> .....	Wide Area Augmentation System
		<b>Wi-Fi</b> .....	Wireless-Fidelity

## Revision History

Revision	Issue Date	Status	Editor	Comments
1.0	June 17, 2024	Obsolete	M.O.	First draft
1.1	July 26, 2024	Obsolete	M.O.	Updated Table 1-4
1.2	November 12, 2024	Obsolete	M.O.	Added more T-codes to Table 1-1
1.3	January 7, 2025	Obsolete	M.O.	Clarified input power rating Added mounting information
1.4	February 6, 2025	Obsolete	M.O.	Updates to Section 1.3
1.5	March 26, 2025	Obsolete	M.O.	Changed IP65 to IP67 throughout document Added Caution Statements to Section 2.5
1.6	July 21, 2025	Obsolete	M.Y.	Updates to GNSS scanning process description
1.7	March 31, 2026	Released	M.O. A.K.	Included Order Codes Add Passive RFID dimensions Fixed Knowledge base links